
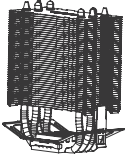
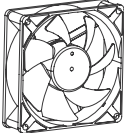





USER MANUAL

CRYO 3H/4H

		
Heatsink x1 For 775/115X/1200 1700/1851	Fan x1	Buckle for Fan x2
		
Intel Bracket x1	White Pin x4	Black Pin x4
		
Thermal compound x1		


© 2024 EVOLABS. All rights reserved. www.evotabstech.com

Intel LGA 775/115X/1200/1700/1851

PLATFORM INSTALLATION INSTRUCTIONS



STEP 1

Align the Intel bracket holes with the corresponding holes on the motherboard. Assemble together with the white pins.




STEP 2

Insert black pins into the holes of the white pins to fix the bracket with the motherboard.

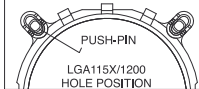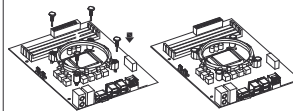


STEP 3

Remove the protective film of the heatsink base.

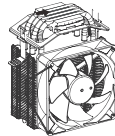


STEP 4

Apply thermal compound on the CPU.

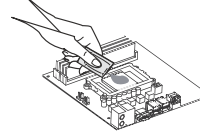


STEP 5

Fix the buckle of the heatsink with the buckle located in the bracket (left and right respectively).

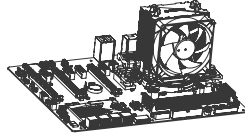

STEP 6

Connect the fan to the CPU_FAN male connector of the motherboard.

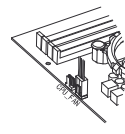


AMD AM3/AM4/AM5

PLATFORM INSTALLATION INSTRUCTIONS


STEP 1

Remove the protective film of the heatsink base.

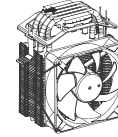


STEP 2

Apply thermal compound on the CPU.

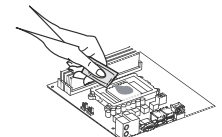


STEP 3

Fix the buckle of the heatsink with the buckle located in the bracket (left and right respectively).

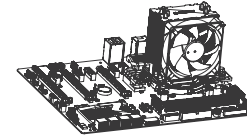

STEP 4

Connect the fan to the CPU_FAN male connector of the motherboard.




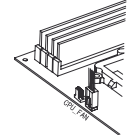


© 2024 EVOLABS. All rights reserved.
www.evotabstech.com



MANUAL DEL USUARIO

CRYO 3H/4H

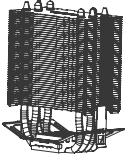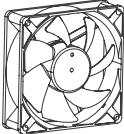		
Disipador x1 For 775/115X/1200 1700/1851		
		
Adaptador para Intel x1	Sujetadores blancos x4	Pins negros x4
		
Compuesto térmico x1		


© 2024 EVOLABS. All rights reserved. www.evotabstech.com

Intel LGA 775/115X/1200/1700/1851

INSTRUCCIONES DE INSTALACIÓN


PASO 1

Alinear los orificios del soporte de Intel con los correspondientes orificios de la placa base. Ensamblar el soporte con los sujetadores blancos.




PASO 2

Insertar los pins negros en los orificios de los sujetadores blancos para fijar el soporte en la placa base.

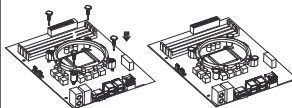


PASO 3

Remover el film protector de la base del disipador.

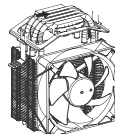


PASO 4

Aplicar compuesto térmico en el procesador (CPU).

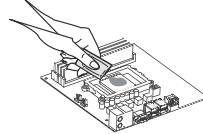


PASO 5

Ajuste las hebillas del disipador al soporte, tanto del lado izquierdo como el derecho.

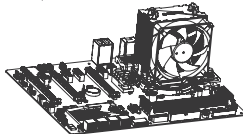

PASO 6

Conecte el ventilador al conector CPU_FAN que se encuentra en la placa base.

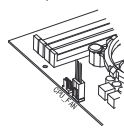


AMD AM3/AM4/AM5

INSTRUCCIONES DE INSTALACIÓN


PASO 1

Remover el film protector de la base del disipador.

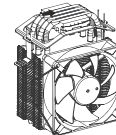


PASO 2

Aplicar compuesto térmico en el procesador (CPU).

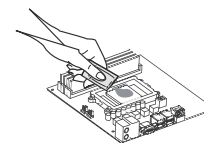


PASO 3

Ajuste las hebillas del disipador al soporte, tanto del lado izquierdo como el derecho.

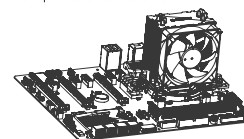

PASO 4

Conecte el ventilador al conector CPU_FAN que se encuentra en la placa base.

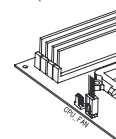

EVOLABS
ENDLESS EVOLUTION

© 2024 EVOLABS. All rights reserved.
www.evotabstech.com